

Authentication Required

http://192.168.118.239 is requesting your username and password.

User Name:

Password:

OK Cancel

1

Just Click 'OK'

The screenshot shows the Lantronix XPort Device Server web interface. The browser address bar shows the URL 192.168.118.239/secure/ftc_conf.htm. The page title is "LANTRONIX XPort". The left sidebar contains a navigation menu with the following items: Network, Server, Serial Tunnel, Hosts, Channel 1, Serial Settings, Connection, Email, Trigger 1, Trigger 2, Trigger 3, Configurable Pins, Apply Settings, and Apply Defaults. The "Network" menu item is highlighted with a red arrow and a yellow callout box containing the number "2" and the text "Click 'Network'". The main content area displays "Device Status" and a table of settings:

Product Information	
Firmware Version:	V6.0.0.2
Build Date:	07-Feb-2013

Network Settings	
MAC Address:	00-80-A3-9F-00-F1
Network Mode:	Wired
DHCP HostName:	<None >
IP Address:	192.168.118.239
Default Gateway:	0.0.0.0
DNS Server:	0.0.0.0
MTU:	1400

Line settings	
Line 1:	RS232, 115200, 8, None, 1, None

At the bottom of the page, the footer contains "WebManager Version: 2.0.0.2" and "Copyright © Lantronix, Inc., 2007-2013. All rights reserved."

- Network
- Server
- Serial Tunnel
 - Hostlist
 - Channel 1
 - Serial Settings
 - Connection
 - Email
 - Trigger 1
 - Trigger 2
 - Trigger 3
- Configurable Pins
- Apply Settings**
- Apply Defaults

Network Settings

Network Mode: **Wired Only** ▼

IP Configuration

- Obtain IP address automatically
- Auto Configuration Methods
 - BOOTP: Enable Disable
 - DHCP: Enable Disable
 - AutoIP: Enable Disable

DHCP Host Name:

- Use the following IP configuration:

IP Address:

Subnet Mask:

Default Gateway:

DNS Server:

Ethernet Configuration

- Auto Negotiate
- Speed: 100 Mbps 10 Mbps
- Duplex: Full Half

OK

5

3

4